



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

Autotune Temperature Controller

OPERATING INSTRUCTIONS AT 66

- 1. Display : 3 digit for PV & 3 digit for SV
- 2. Range : RTD Type -99 to 400 deg
: J Type -0- 600 deg
: K Type 0 -999 deg
- 3. Resolution : 1 deg (J/K) and 0.1 deg (RTD)
- 4. Accuracy : +/- 0.5% (Full Scale)
- 5- Hysterisis : 0 to 99°C
- 6. OFFSET : -99 to 99°C
- 7- Alarm Action : Heat / Cool Selectable
- 8. Control Action : Autotune action

Terminal Connection

1-Connect terminals of the controller according to the terminal connections


Set Points

Set Point 1 (output) can be viewed by pressing **SET** KEY.

Set Point can be changed by pressing **SET** KEY + **▼** & **▲** KEYS

Note: To come out of Programming leave the Keys unpressed for more than 4 seconds

Programming the Autotune Controller

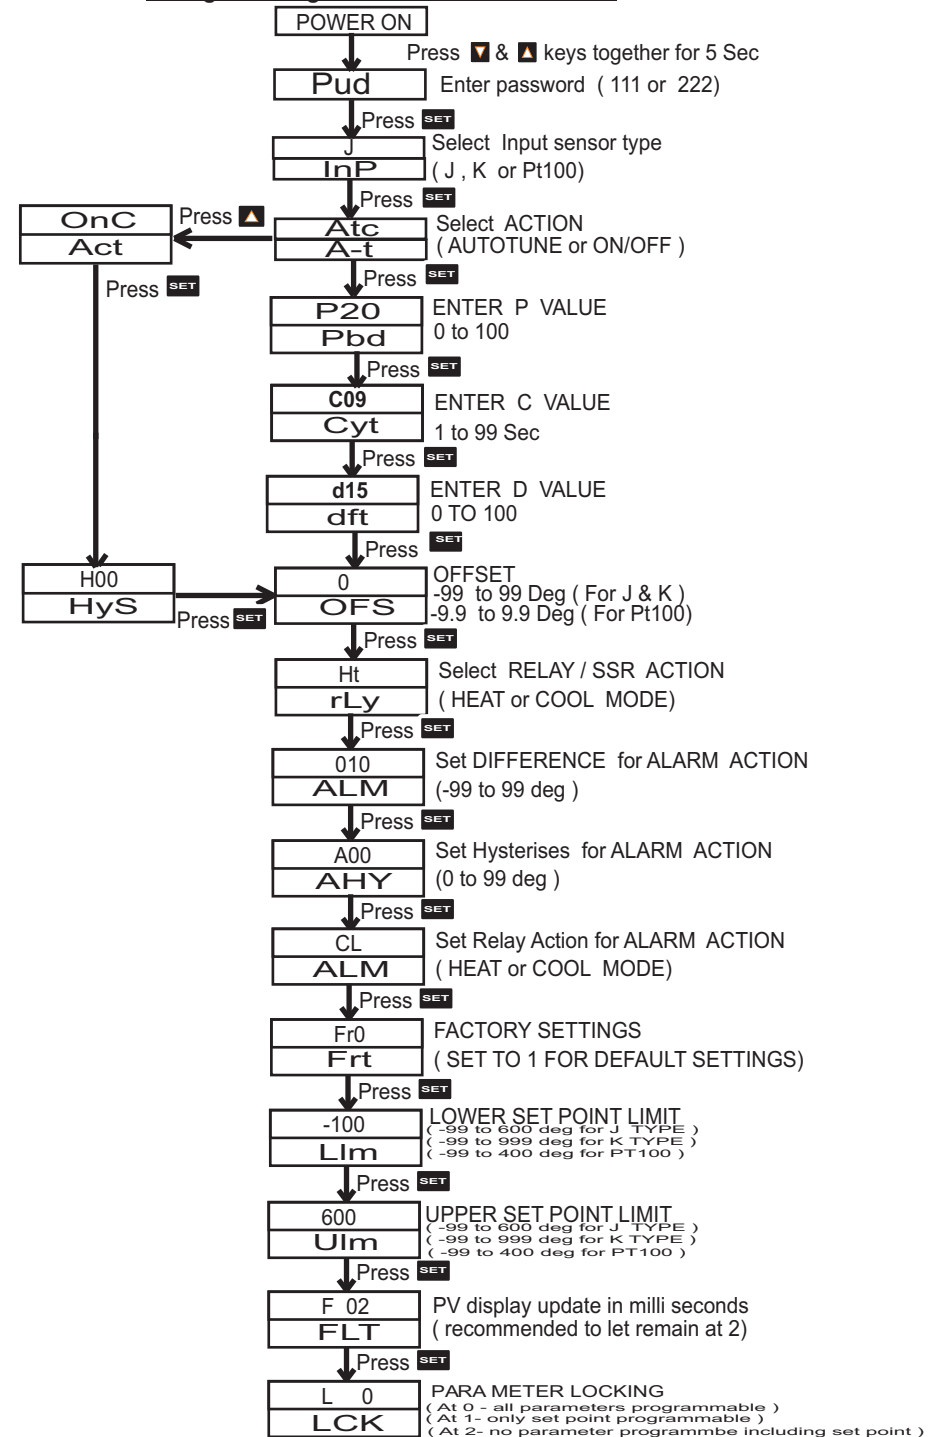

Autotune Temperature Controller

OPERATING INSTRUCTIONS

1. Display : 3 digit for PV & 3 digit for SV
2. Range : RTD Type -99 to 400 deg
: J Type - 0- 600 deg
: K Type 0 -999 deg
3. Resolution : 1 deg (J/K) and 0.1 deg (RTD)
4. Accuracy : +/- 0.5% (Full Scale)
- 5- Hysteresis : 0 to 99°C
6. OFFSET : -99 to 99°C
- 7- Alarm Action : Heat / Cool Selectable
8. Control Action : Autotune action

Terminal Connection

- 1-Connect terminals of the controller according to the terminal connections

Set Points

Set Point 1 (output) can be viewed by pressing **SET** KEY.

Set Point can be changed by pressing **SET** KEY + **▼** & **▲** KEYS

Note: To come out of Programming leave the Keys unpressed for more than 4 seconds

Programming the Autotune Controller

