



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

PROGRAMMABLE COUNTER


SPECIFICATIONS

COUNTING RANGE	:	1-999999
SET POINT RANGE	:	1-999999
RESET TIME RANGE	:	0.0-999.9 SEC.
SCALE FACTOR	:	1-9999
DECIMAL POINT	:	Shiftable upto 3 digit
RESET	:	Both front & Remote Reset
OUT PUT	:	05 A @ 230 VAC
	:	SPDT RELAY
POWER	:	AC 220 V+/- 10% @ 50Hz
	:	24 VAC /DC modes-on Request
OPERATING TEMP	:	0-50 deg C
HOUSING	:	ABS Plastic

PROGRAMMING / OPERATING INSTRUCTIONS

- 1- To view TOTAL COUNT press SELECT KEY once.
(Always display in blinking mode)(Range 0.999999)
- 2- Press SELECT KEY twice times to enter AUTO RESET FACTOR value (S1).
(Use UP/DOWN KEY to change)(Range 0.0-999.9 seconds)(Set 0.0 to disable this mode)
- 3- Press SELECT KEY three times to enter SCALE FACTOR value (S2)
(Use UP/DOWN key to change)(Range 1-99)(Set 1 for normal counting)
- 4- Press SELECT KEY four times to enter DIVISION FACTOR values (S3).
(Use UP/DOWN KEY to change)(Range 1-99)(Set 1 for normal counting)
- 5- Press SELECT KEY four times to enter DOT value (E).
(Use UP/DOWN key to change)(Range +3- -2)
- 6- For 2-5 every time after changing the value press SELECT KEY continuously to Store the new value. (For direct digit change use SELECT KEY to SELECT DIGIT after pressing UP/DOWN KEY once.
- 7- Press RESET KEY to reset count value.
(Total count can be reset after selecting Total Count mode)

PROGRAMMING THE COUNTER

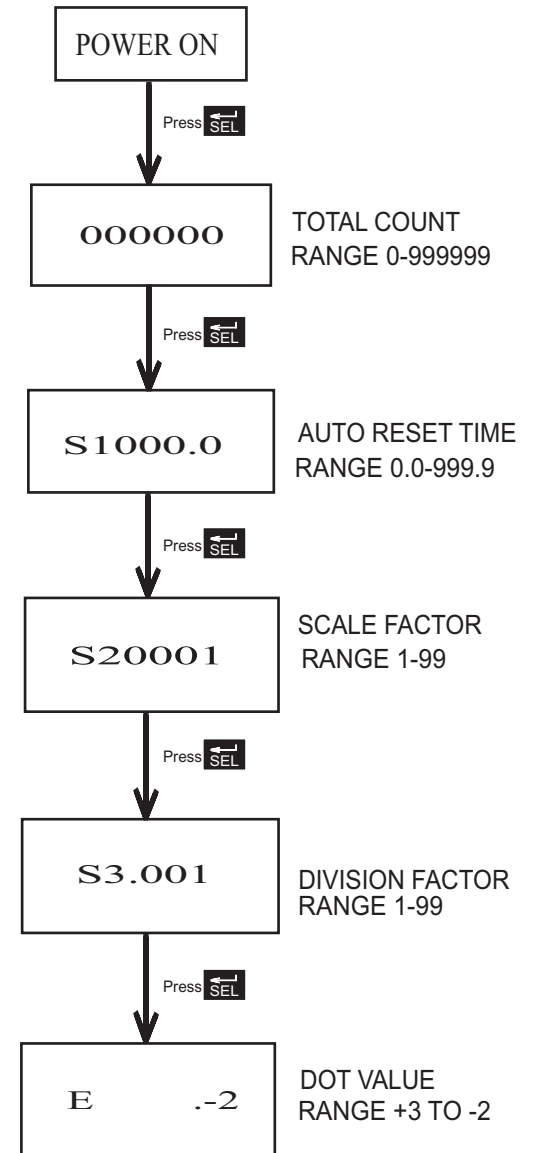

NOTE:- By changing each of the above parameters please store it by pressing SEL key 5 secs. continuously.

PROGRAMMABLE COUNTER


SPECIFICATIONS

COUNTING RANGE	:	1-999999
SET POINT RANGE	:	1-999999
RESET TIME RANGE	:	0.0-999.9 SEC.
SCALE FACTOR	:	1-9999
DECIMAL POINT	:	Shiftable upto 3 digit
RESET	:	Both front & Remote Reset
OUT PUT	:	05 A @ 230 VAC
	:	SPDT RELAY
POWER	:	AC 220 V+/- 10% @ 50Hz
	:	24 VAC /DC modes-on Request
OPERATING TEMP	:	0-50 deg C
HOUSING	:	ABS Plastic
MENSTIONS	:	72x72x115 mm

PROGRAMMING / OPERATING INSTRUCTIONS

- 1- To view TOTAL COUNT press SELECT KEY once.
(Always display in blinking mode)(Range 0.999999)
- 2- Press SELECT KEY twice times to enter AUTO RESET FECTOR value (S1).
(Use UP/DOWN KEY to change)(Range 0.0-999.9 seconds)(Set 0.0 to disable this mode)
- 3- Press SELECT KEY three times to enter SCALE FACTOR value (S2)
(Use UP/DOWN key to change)(Range 1-99)(Set 1 for normal counting)
- 4- Press SELECT KEY four times to enter DIVISION FACTOR values (S3).
(Use UP/DOWN KEY to change)(Range 1-99)(Set 1 for normal counting)
- 5- Press SELECT KEY four times to enter DOT value (E).
(Use UP/DOWN key to change)(Range +3- -2)
- 6- For 2-5 every time after changing the value press SELECT KEY continuously to Store the new value. (For direct digit change use SELECT KEY to SELECT DIGIT after pressing UP/DOWN KEY once.
- 7- Press RESET KEY to reset count value.
(Total count can be reset after selecting Total Count mode)

PROGRAMMING THE COUNTER

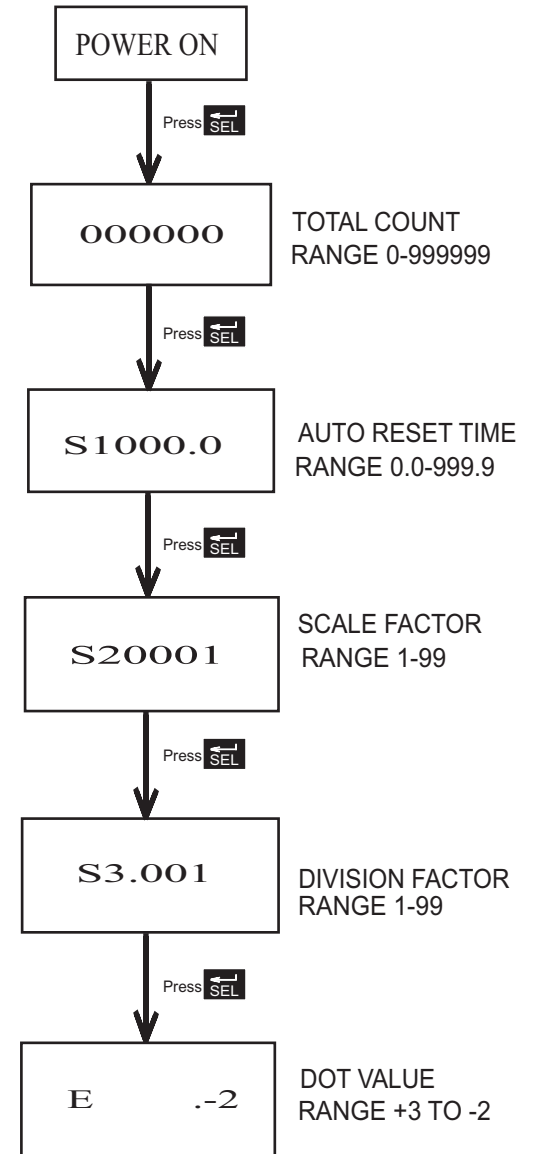

NOTE:- By changing each of the above parameters please store it by pressing SEL key 5 secs. continuously.