



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

## **PRESET COUNTER** **MODEL NO:- C 38** **SPECIFICATIONS**

Counting /Preset range 1-9999  
Auto reset time range 0-999 Sec  
Reset Both Front & Remote reset  
Output SPDT Relay 5A @230 V AC

Preset Counter is a Microcontroller based desing controller.It is having one set point &selectable Auto reset time.Programming of controller is through key pad at front panel .It can could up to 9999counts.Set point value can be programmed range 1-9999 &auto rest time can be programmed (Range 0-999 sec ) Count value can be manually reset with reset key.

### **HOW TO PROGRAMME**

Connect the main power supply (220V +/- 10%) at point at back Panel.


### **SET POINT**

Press UP/DOWN key once.Controller will display the current set point value in 1st row and "SET" display in 2nd row. Now us UP/DOWN key to change it to desired value and press "SELECT" key continuously 3to4 seconds till.It displays"Str". Now set point value is stored.

### **AUTO RESET TIME**

Press SELECT key once. Controller will Display "TIME" in 2nd row and current auto resting value in 1st row. Now use UP/DOWN keys to change it to desired value and Press "SELECT "key continuously 3 to 4 seconds till it display .

## **PROGRAMMING THE COUNTER**

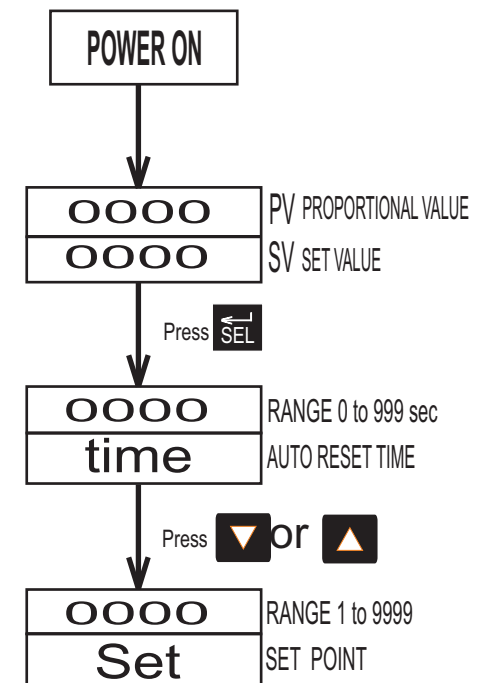

**NOTE:-** By changing each of the above parameters please store it by pressing SEL key 5 secs. continuously.

# PRESET COUNTER

## SPECIFICATIONS

Counting /Preset range 1-9999

Auto reset time range 0-999 Sec

Reset Both Front & Remote reset

Output SPDT Relay 5A @230 V AC

Preset Counter is a Microcontroller based desing controller.It is having one set point &selectable Auto reset time.Programming of controller is through key pad at front panel .It can could up to 9999counts.Set point value can be programmed range 1-9999 &auto rest time can be programmed (Range 0-999 sec ) Count value can be manually reset with reset key.

## HOW TO PROGRAMME

Connect the main power supply (220V +/- 10%) at point at back Panel.


### SET POINT

Press UP/DOWN key once.Controller will display the current set point value in 1st row and "SET" display in 2nd row. Now us UP/DOWN key to change it to desired value and press "SELECT" key continuously 3to4 seconds till.It displays"Str". Now set point value is stored.

### AUTO RESET TIME

Press SELECT key once. Controller will Display "TIME" in 2nd row and current auto resting value in 1st row. Now use UP/DOWN keys to change it to desired value and Press "SELECT "key continuously 3 to 4 seconds till it display .

## PROGRAMMING THE COUNTER

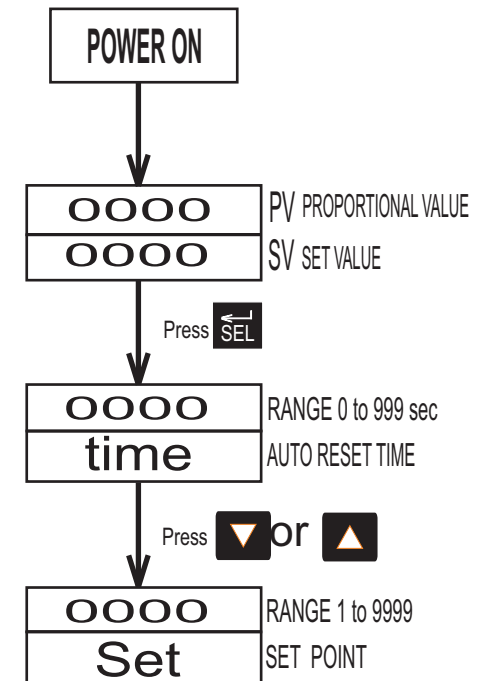

**NOTE:-** By changing each of the above parameters please store it by pressing SEL key 5 secs. continuously.