



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

# Digital Humidity Controller

OPERATING INSTRUCTIONS H 931

Specifications :-

- 1. Display : 3 digit 0.56"
- 2. Range : 0 to 99.9 %RH
- 3. Resolution : 0.1 %RH
- 4. Accuracy : +/- 0.5% (Full Scale)
- 5- Hysterisis : 0 to 99%RH
- 6. OFFSET : -9.9 to 9.9 %RH
- 7- Relay Action : H / dH Selectable
- 8. Control Action : ON / OFF

## Terminal Connection


- 1-Connect terminals of the controller according to the terminal connections

## Set Point

Set Point can be viewed by pressing **SET** KEY.

Set Point can be changed by pressing **SET** KEY + **▼** & **▲** KEYS

# Programming the Humidity Controller

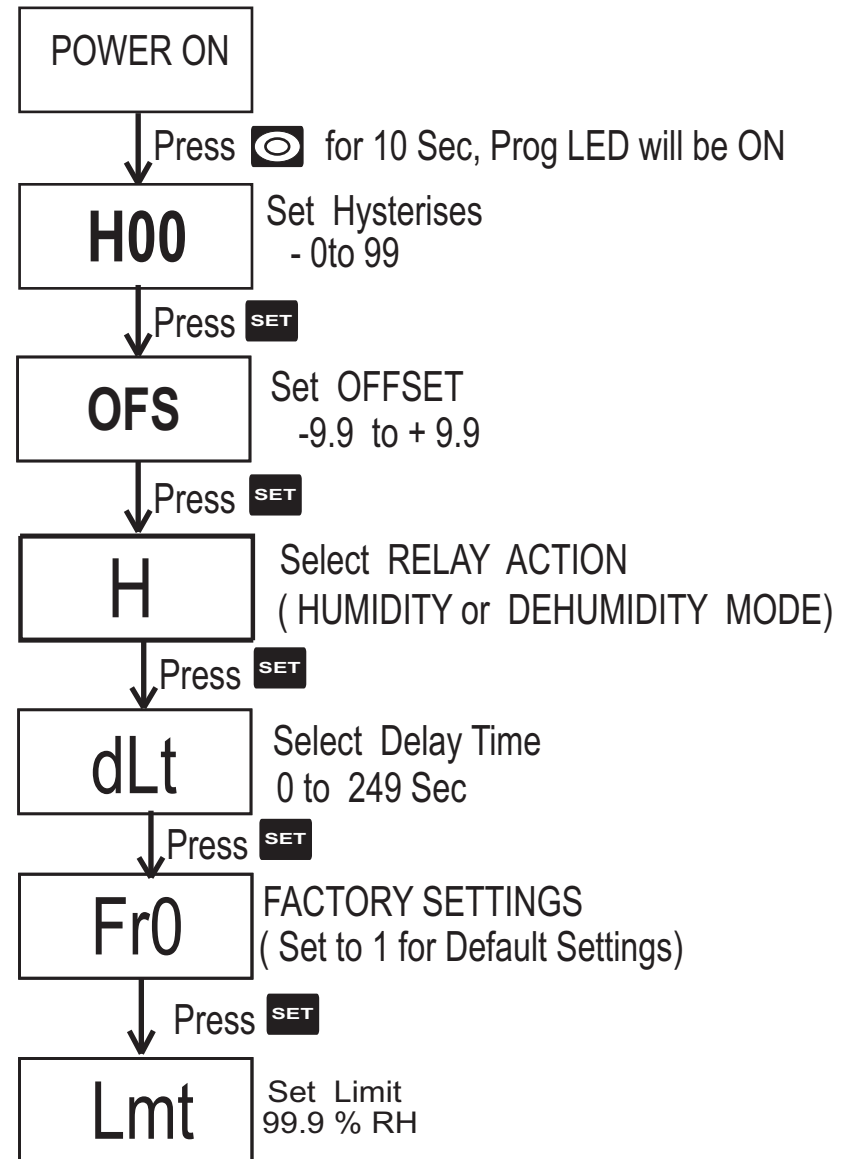

Note: To come out of Programming leave the Keys unpressed for more than 6 seconds or Switch off the Controller

# Programming the Humidity Controller

## Digital Humidity Controller

### OPERATING INSTRUCTIONS

#### Specifications :-

- |                   |                         |
|-------------------|-------------------------|
| 1. Display        | : 3 digit 0.56"         |
| 2. Range          | : 0 to 99.9 %RH         |
| 3. Resolution     | : <u>0.1 %RH</u>        |
| 4. Accuracy       | : +/- 0.5% (Full Scale) |
| 5- Hysterisis     | : 0 to 99%RH            |
| 6. OFFSET         | : -9.9 to 9.9 %RH       |
| 7- Relay Action   | : H / dH Selectable     |
| 8. Control Action | : ON / OFF              |

### Terminal Connection

- 1-Connect terminals of the controller according to the terminal connections

### Set Point

Set Point can be viewed by pressing **SET** KEY.

Set Point can be changed by pressing **SET** KEY + **▼** & **▲** KEYS

