



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

LENGTH COUNTER

MODEL NO.:-LC1A1 / 3A1

SPECIFICATIONS

Display(Upper) :6 Digit 7 Seg. 0.3"

Display(Lower) :4 Digit 7 Seg. 0.3"


Input :Proximity PNP/NPN

Output :Relay - 230 VAC @ 5A

Power :AC 220 VAC +/- 10%@50HZ

- * Programming through front keys. Parameters like Set Count Length/ Set Diameter/ Set Auto Reset Time can be viewed/Changed using Select/SET key with Shift Digit Key & Up Key. Select Key used to Store and select next parameters.
- * Count Length:-Upper Display Show Count length(Range 0.1 to 99999.9 Meter)measured in Meters with the Formula = $3.14 \times \text{Diameter} \times \text{No of Revolution}$.
- * Speed:- Lower Display Show Speed in Meter/ Minute(Range 0.1 to 999.9 Meter/Minute) measured in Meter per Minute with the Formula $3.14 \times \text{Diameter} \times \text{Revolution Per Minute}$.
- * Reset:- Count Length count Value can be cleared to 0.0 by pressing Reset Key to restart the Length Count.
- * Batch Count:- Batch Count can be viewed by pressing Shift Digit Key alone. Batch count Value can be cleared to 0 by pressing Shift Digit Key + Reset Key together to restart the new Batch Count.

PROGRAMMING THE LENGTH COUNTER

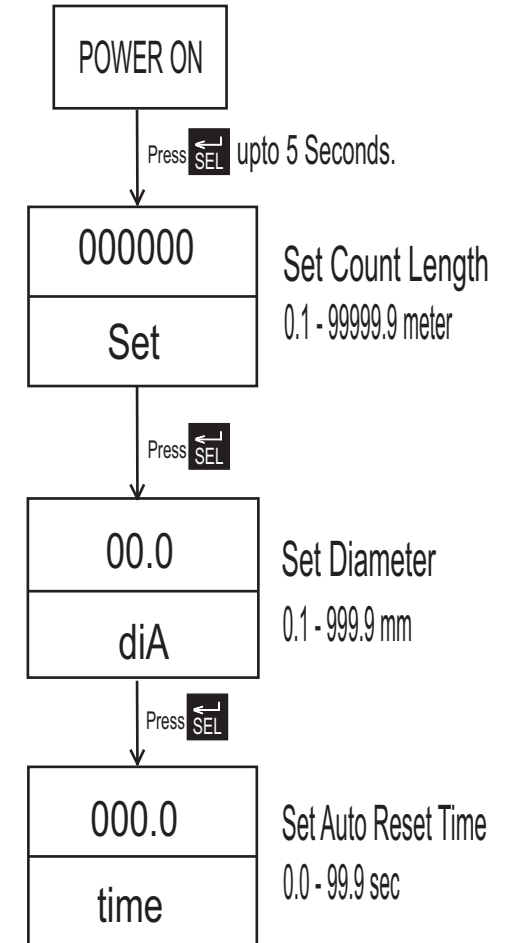

LENGTH COUNTER

SPECIFICATIONS

Display(Upper) :6 Digit 7 Seg. 0.3"

Display(Lower) :4 Digit 7 Seg. 0.3"

Input :Proximity PNP/NPN

Output :Relay - 230 VAC @ 5A

Power :AC 220 VAC +/- 10%@50HZ

- * Programming through front keys. Parameters like Set Count Length/ Set Diameter/ Set Auto Reset Time can be viewed/Changed using Select/SET key with Shift Digit Key & Up Key. Select Key used to Store and select next parameters.
- * Count Length:- Upper Display Show Count length(Range 0.1 to 99999.9 Meter)measured in Meters with the Formula = $3.14 \times \text{Diameter} \times \text{No of Revolution}$.
- * Speed:- Lower Display Show Speed in Meter/ Minute(Range 0.1 to 999.9 Meter/Minute) measured in Meter per Minute with the Formula $3.14 \times \text{Diameter} \times \text{Revolution Per Minute}$.
- * Reset:- Count Length count Value can be cleared to 0.0 by pressing Reset Key to restart the Length Count.
- * Batch Count:- Batch Count can be viewed by pressing Shift Digit Key alone. Batch count Value can be cleared to 0 by pressing Shift Digit Key + Reset Key together to restart the new Batch Count.

PROGRAMMING THE LENGTH COUNTER

