


R-94X

RPM INDICATOR
TERMINAL CONNECTIONS

1 2
AC 220V

9 10 11 12
-VE  +VE
SHORT FOR PNP SHORT FOR NPN
SENSOR